


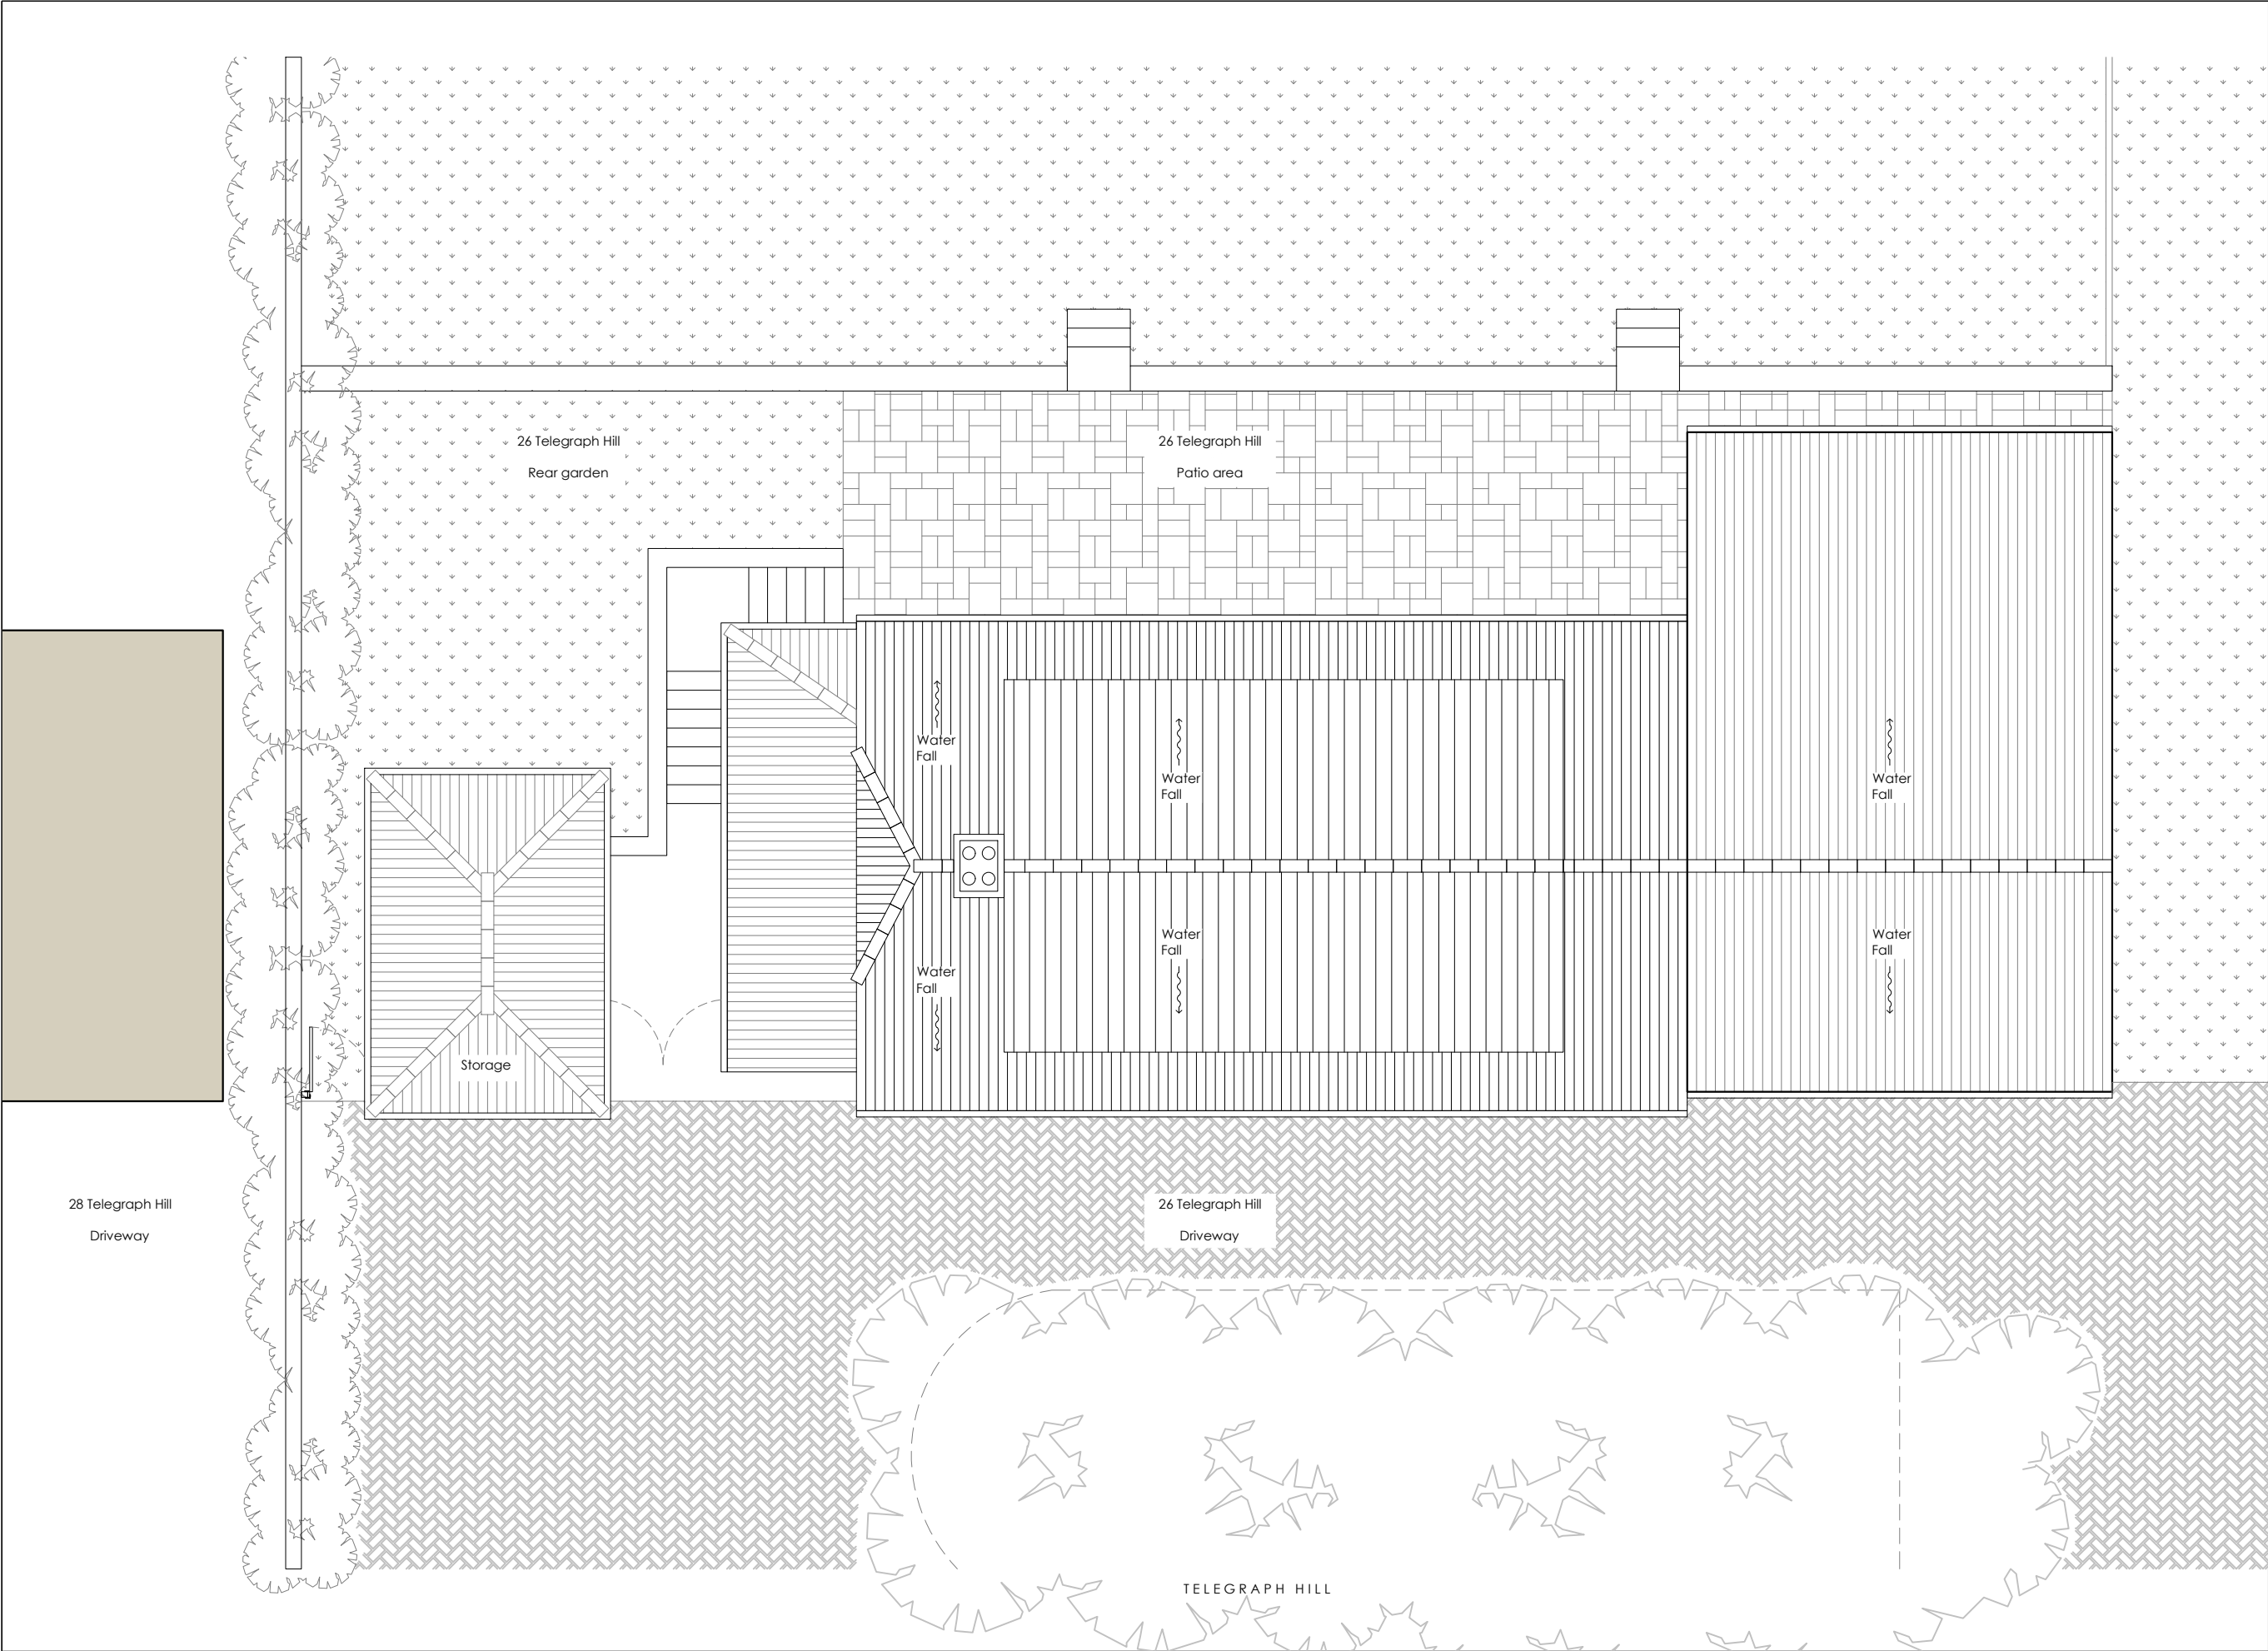

- NOTES:
1. All dimensions and levels are to be checked on site by the main contractor before work commences.
 2. The Architect is to be informed immediately of any discrepancies.
 3. Do not scale this drawing, use written dimensions only.
 4. All dimensions are in millimeters unless otherwise stated.
 5. If in doubt ask.