


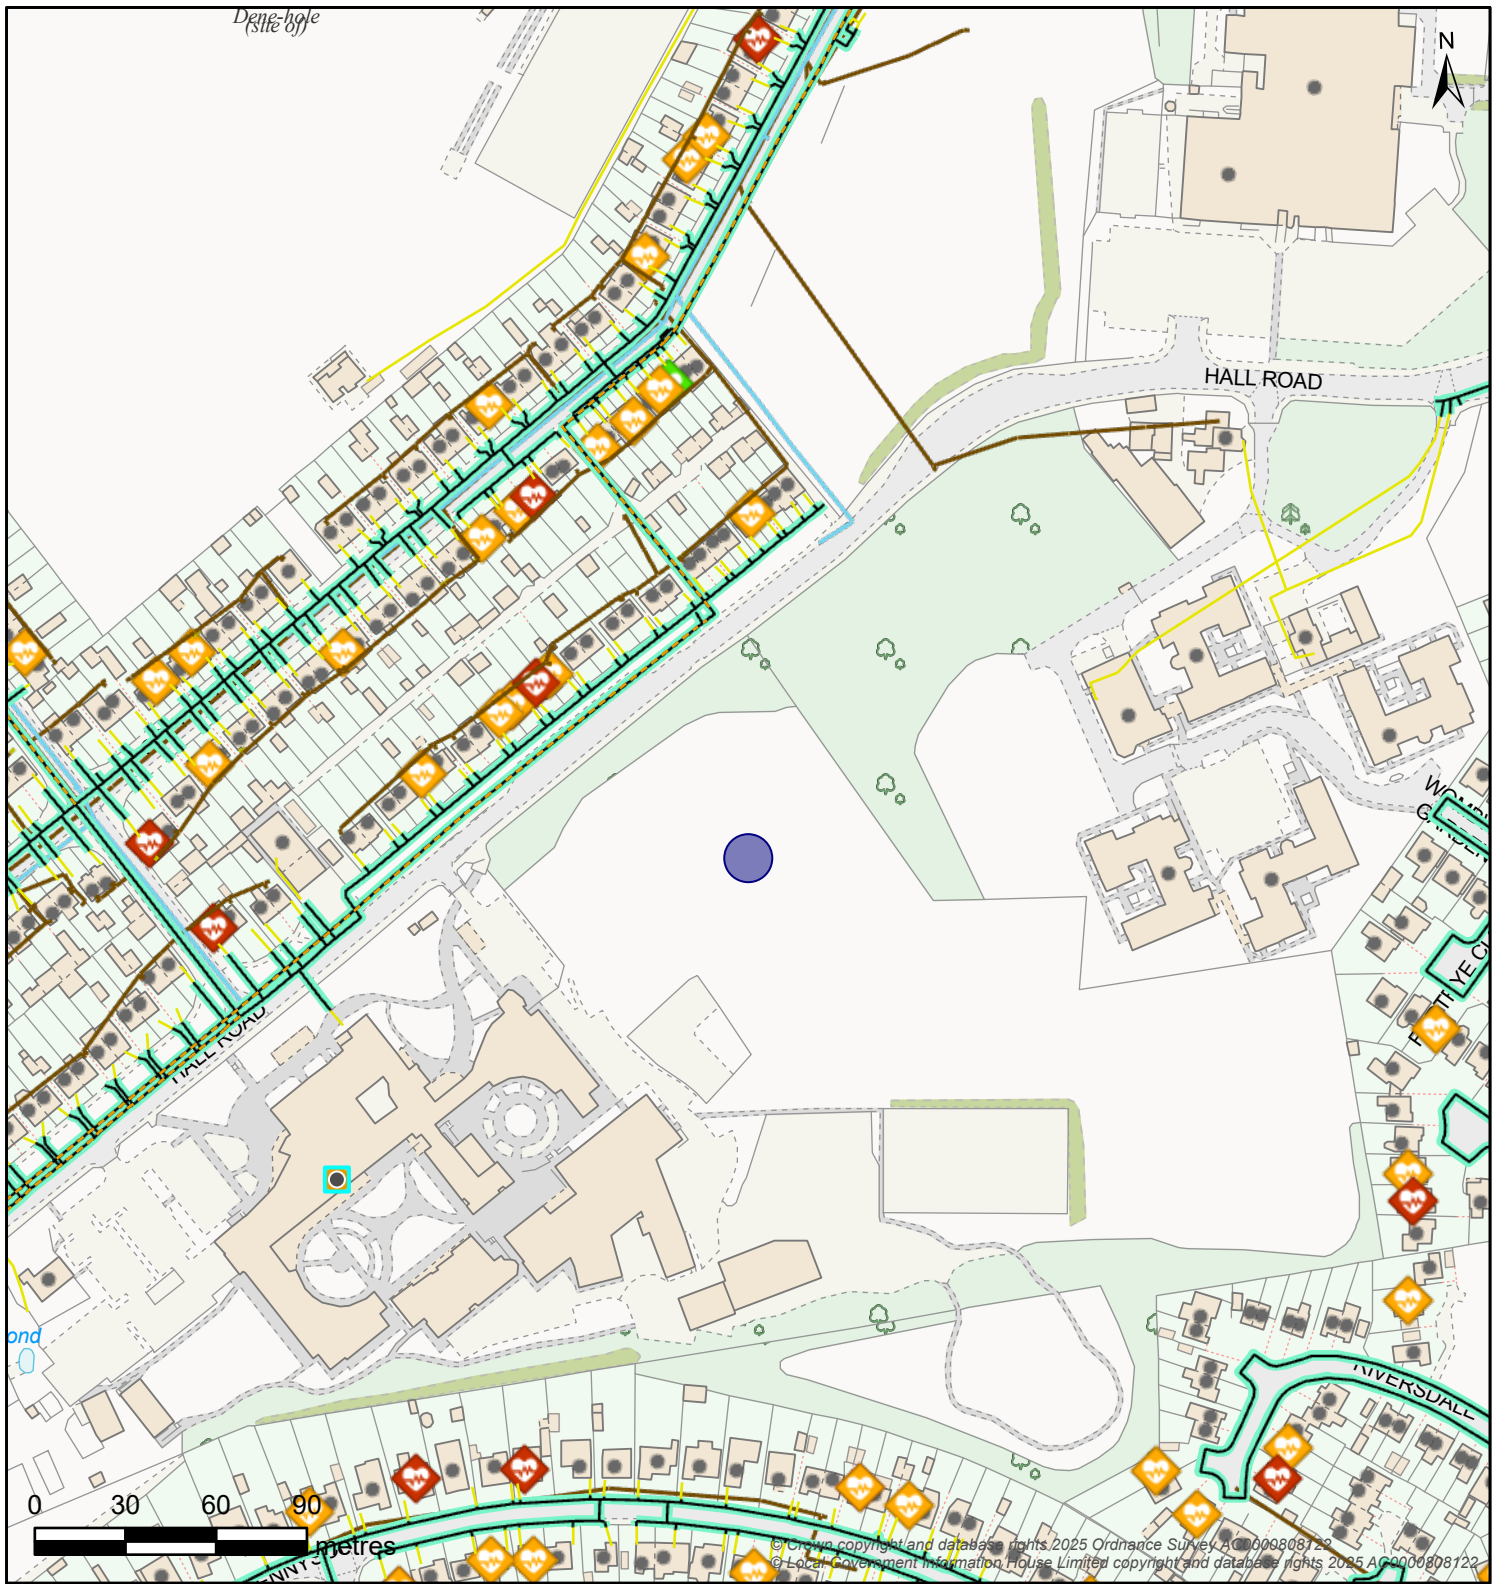

Boundary Box		Break Pressure Tank		Capped End		Hydrant		
Boundary Box		BPT Break Pressure Tank		Capped End		Emptying Plug	Fire Hydrant	WOH Washout Hydrant
Pressure Monitoring		Service Reservoir		Meter		Valve - Controllable		
Logger		Covered	Tower	Meter		Open Valve	Closed Valve	Stop Tap
Site				Valve - Flow				
Abstraction Point		Supply Works		Air Valve	NRV Non-Return Valve		WO Washout Empty Valve	
Booster Station		Transfer Station		Valve - Pressure				Pipe Bridge
Surface Reservoir		Underground Source		PRV Pressure Reducing Valve		PSV Pressure Sustaining Valve		== Pipe Bridge
Water Pipe				Water Area				
Communication		Trunk		Decommissioned		Water Supply Zone		District Meter Area
Distribution		Raw		Discolouration				
Non-Potable		Private						

Map Title: SW Print

Printed By: Kelly.Donaldson

Date Printed: 29/01/2025

Map Scale: 2500

The information provided is believed to be correct but is provided on an 'as is' basis and without any warranty or condition express or implied, statutory or otherwise as to its quality or fitness for purpose. Actual positions of assets should always be determined on site.



from
Southern Water.